

Note: Please read the following updated information regarding the ignition switch and stopping the engine. Disregard information on page 268 & 269 of your current Operator's Manual, Publication no. PV776-20707968 (07.2004).


Ignition Switch

The ignition switch is located on the right side of the steering column immediately under the steering wheel. Standard equipment is a normal ignition switch.

Note: The vehicle is delivered with 2 identical keys. If more keys are needed, order them through your authorized Volvo Truck dealer.

The ignition positions are:

O	Radio, Accessories
I	OFF
II	Drive
II Push (see arrow indicating "push on key")	Preheat (Volvo engine only)
III	Start

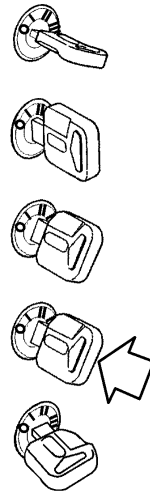

Note: Be aware that the roman numerals shown on the ignition pad are only used in this illustration as a guide. There are NO roman numerals on the ignition pad

The key can only be removed when in the I or OFF position.

For full starting instructions, refer to page 266 in the Operator's Manual.

2 Addendum, Engine Start Operation

Stopping the Engine

Allow the engine to slow down and idle for 3 to 5 minutes before shutting it off.

This allows the turbo to slow down and the cooling system to dissipate the engine heat. Switch the engine off by turning the ignition key to the **I**, or OFF, position.



CAUTION

Shutting off an engine immediately after high speed or full load operation can damage the turbo and cause heat stress in the engine. Always let the engine idle for 3 to 5 minutes before shutting it off.