


Delco Radios
VN, VHD

Radios

Models Affected

Volvo Part Number	Delco Part Number	Description
20395999	09383919	XTA-2000 Stereo
20396000	09377079	XTA-2100 Base Cassette
20396001	09377059	XTA-2200 Uplevel Cassette
20396002	09377069	XTA-2300 Uplevel CD

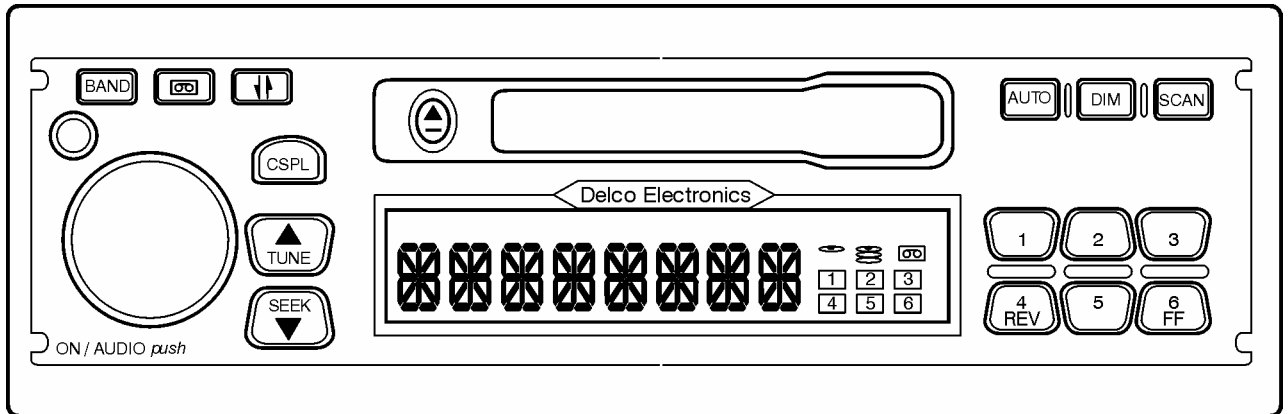

W3004736

This information bulletin consists of the steps necessary to change the frequency band on the XTA Family Radios to the USA setting. Customer complaint might be: Can not tune all FM or AM radio stations; or Radio will not tune USA FM frequencies from 87.7 MHz with 200 KHz (i.e.: 87.7, 87.9, 10.7, 107.7, 107.9 MHz). Or radio will not tune USA AM frequencies from 530 KHz to 1710 KHz with 10 KHz (i.e: 530, 540, 1710 KHz).

Steps to Verify USA Frequency

- 1 Turn vehicle ignition "ON" and radio "OFF" (Radio displays current time).
- 2 Press and hold **DSPL/TM SET** button on radio, until the hour digit on the time display begins flashing.
- 3 Immediately press BAND button once. If the radio displays **USA**, **DO NOT PRESS ANY BUTTONS UNTIL RADIO DISPLAY RETURNS TO CURRENT TIME.**

Steps to Change Radio to USA Frequency

- 1 Turn vehicle ignition "ON" and Radio "OFF" (Radio displays current time).
- 2 Press and hold DSPL/TM SET button on radio, until the hour digit on the time display begins flashing.
- 3 Press BAND button several times until the radio displays USA. **DO NOT PRESS ANY BUTTONS UNTIL RADIO DISPLAY RETURNS TO CURRENT TIME.**