


Service Bulletin Trucks

Date Group No. Page 11.2006 **255 61** 1(4)

Air Intake Pipe, Turbocharger Replacement D13F

Air Intake Pipe, Turbocharger, Replacement

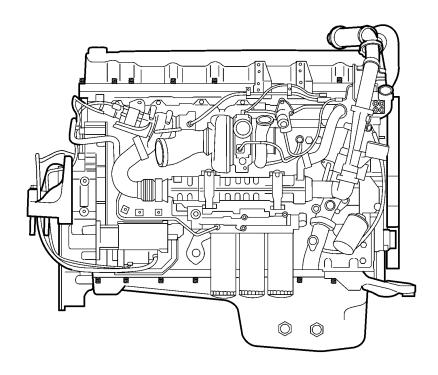

W2005779

This information covers the proper replacement procedure for the turbocharger air intake pipe on the Volvo D13F engine.

Contents

"Air Intake Pipe, Turbocharger, Replacement" page 2

Note: Information is subject to change without notice.

Illustrations are used for reference only and can differ slightly from the actual vehicle being serviced. However, key components addressed in this information are represented as accurately as possible.

PV776-20177469 USA23151.ihval


Service Procedures

2553-03-02-03 Air Intake Pipe, Turbocharger, Replacement


You must read and understand the precautions and guidelines in Service Information, group 20, "General Safety Practices, Engine" before performing this procedure. If you are not properly trained and certified in this procedure, ask your supervisor for training before you perform it.

Removal


Loosen the air compressor fresh air hose clamp at the main fresh air pipe.

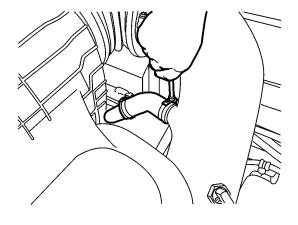

W2004719

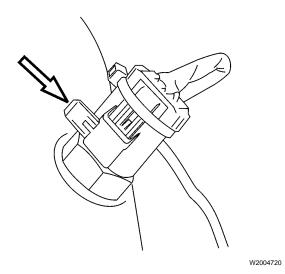


Unplug the air temperature sensor wiring harness connector. Remove the lock tab and separate the connector from the sensor. Remove the sensor harness clamp from the main fresh air pipe.

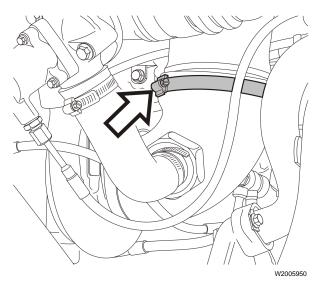


Loosen the clamps and remove the main fresh air pipe from the air compressor fresh air hose, the air filter housing and the turbocharger air inlet elbow.


Installation

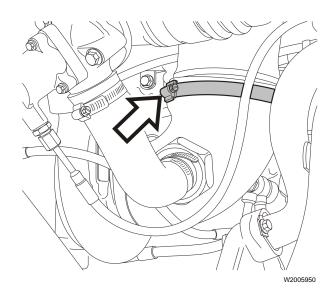

Install the main fresh air pipe to the air filter housing and the turbocharger air inlet elbow.

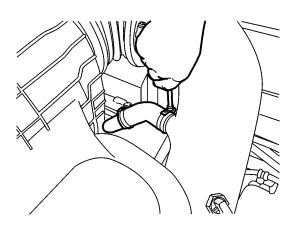

Install the air compressor fresh air hose to the main fresh air pipe, position the clamp and tighten to secure.

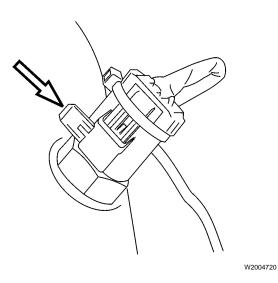

Install the air temperature sensor connector to the sensor. Insert and secure the connector lock tab. Install the sensor harness clamp to the main fresh air pipe.